



🏠 > PRODUCENCI > BACHMANN > BACHMANN LIFT > BACHMANN LIFT DATA - GNIAZDO WYSUWANE Z BLATU





Bachmann LIFT Data - Gniazdo wysuwane z blatu

Numer referencyjny: 904.009

Dostępność Wysyłka w 14 dni.

Konfiguracja: 3x 230V + 2x RJ45

Kolor: srebrny

1

Więcej informacji

Bachmann LIFT Data - Gniazdzka automatycznie wysuwane z blatu

Gniazdo blatowe Bachmann Lift to połączenie funkcjonalności i wysokiej klasy wzornictwa. Montowane najczęściej w biurach, salach konferencyjnych, hotelach i salonach sprzedaży. Korpus po wysunięciu umożliwia dostęp do gniazd z czterech stron blatu.

Konfiguracja gniazda Bachmann Lift: 3 gniazda schuko + podwójne gniazdo RJ45

Urządzenie wyposażone w kabel zasilający oraz kabel sieciowy o długości 3m.

Kolor wieka: srebrny

Srebrne obudowy występują wyłącznie z gniazdami schuko.




Korpus wysuwa się automatycznie po naciśnięciu wieka, umożliwiając podłączenie wtyczki z czterech stron. Po zakończeniu pracy odłączamy kable i delikatnie naciskamy wieko w celu schowania korpusu do początkowej pozycji. Podczas kiedy nie używamy urządzenia, gniazdo schowane jest na równi z blatem.



LIFT może być wyposażony w różne konfiguracje gniazd zasilających i sieciowych.

Wymiary gniazda blatowego Bachmann Lift:

- średnica otworu montażowego: 140mm
- głębokość zabudowy: 195mm

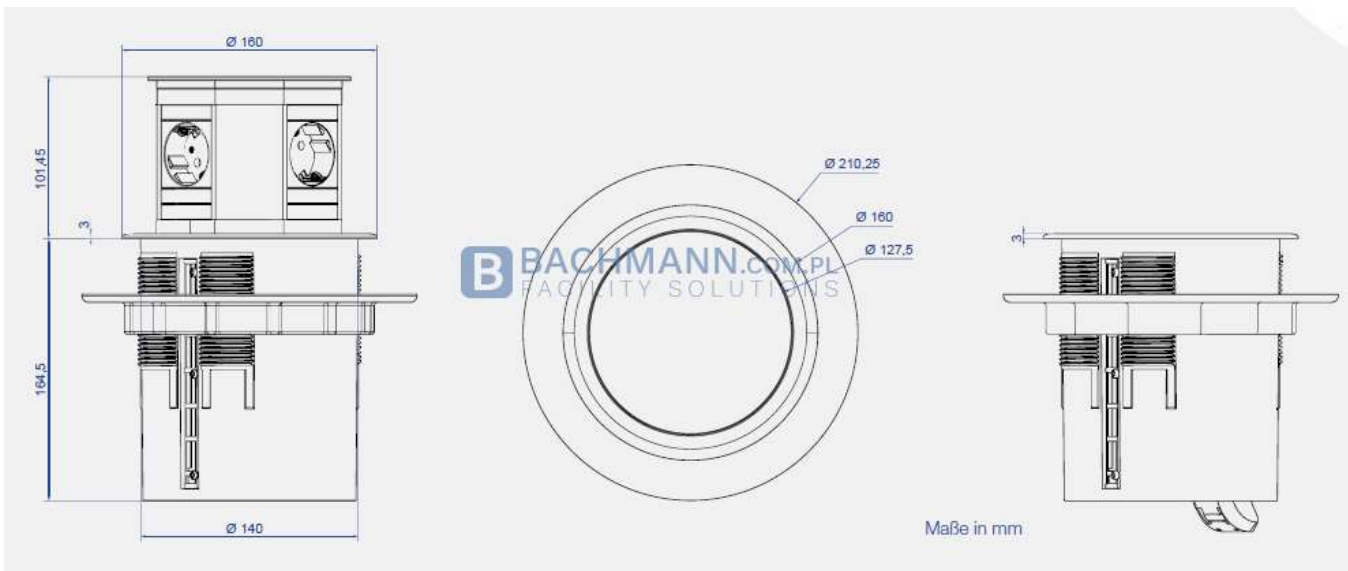

Dlaczego warto wybrać gniazdko nabladowe Bachmann Lift?


- nowoczesny design i funkcjonalność
- korpus wysuwa się automatycznie po naciśnięciu wieka
- dostęp z czterech stron
- niewielka głębokość zabudowy
- kompaktowa obudowa

Montaż gniazda blatowego Bachmann Lift:

LIFT dimensions:

Built-in dimension: Ø 140mm
 Built-in depth: approx. 195mm
 Table thickness: approx. 10mm

For the mounting of the LIFT power tower it is necessary to make a round hole in the table at the position you need. The round hole should have a diameter of 140mm. For the drill hole we offer additional a hole saw. (Ref. 904.900)

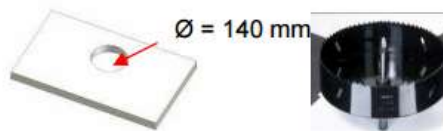**Second mounting step**

Please pack the LIFT tower out of the packaging and beware of scratches on the surface of the tower.

Insert the body of the tower into the hole. The cables have to be inserted carefully before the body in that hole.



B BACHMANN.COM.PL
 FACILITY SOLUTIONS

3 mounting step

Screw on the ring to the body of the tower till to the underside of the table.

Please screw the ring carefully and take care that the ring is not sloping to the body. Screw the ring not to hard and don't damage thread. To use the tower press the inner lid down. The tower will get out automatically and the outlets are available. When the tower is not used anymore please put the plugs out of the outlets and press the inner lid till down. The tower is blocked in the body and the inner lid is plan to the outer ring of the tower body.

**Connection**

In general the LIFT tower is delivered with fixed connected cable. The cables have at the output from the tower a strain relief.

In general the cables have already connectors at the end of the cable and can be connected easily.

Notice:
 The electrical installation should be done by a qualified electrician.



Gwarancja: 2 lata

Producent: Bachmann

Related Products